



LFM[®]



LFM Software FAQ's

F.A.Q. 03

Location of .int and .png files [bubble views & source image pictures]

Background:



When the Show Bubble or Show Source Image function is used for the first time, LFM Server will need to be set to point to the .int/.png file location. In practice, the user will see a warning window



that the file has not been located, and will be prompted to use the browser to find the file. Any subsequent use of this function will result in the image appearing directly.

Example.

If the project structure is set as advised in F.A.Q.02, point to X:\Project_N\images\scan_xxx.int in the browser on first use.

Older databases

LFM Server was originally configured to have the .int/.png files in the database directory. [/png]
This is

now considered to be inefficient because most projects receive Database and Viewer deliverables, resulting in duplication of files. If the .int/.png files are stored in the /images directory, both programs will be able to access them fully.